

Thank you for your choice SKG appliance. Please read the user manual before use.

Electric Cooker User Manual

EB-FC38-22

EB-FC58-22



SKG

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plug, or (state specific part in question) in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors (this item may be omitted if is specifically intended for outdoors use).
9. Do not let cord hang over edge of table or counter, or touch hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliances first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

Servicing should be performed by an authorized service representative.

This product is intended for household use.

A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power supply cords or extension cords are available and may be used if care is exercised in their use. If longer detachable power supply cords or extension cords are to be used:

(1) the marked electrical rating of the cords set or extension cord should be at least as

great as the electrical rating of the appliance;

(2) if the appliance is of the ground type the extension should be a grounding-type 3 wire cored;

(3) and a long cord should be arranged so that it will not drape over the counter top or table top where it can be pulled down by children or tripped over accidentally.

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way.

If the plug does not fit fully in the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician.

Do not attempt to defeat this safety feature.

The appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance.

Safety Instructions

Be sure to read and observe the instructions shown below before using the product.

- Be sure to observe the safety instructions shown below in order to prevent you and other people from being injured.
- Keep this manual for your further reference.
- Use the product at local voltage only.
- Do not use a damaged AC power cord.
- Damaging the cord, using the damaged cord, modifying bending forcibly, bringing close to a hot object, pulling twisting, bundling, etc.
- Handling the cord in such a way may result in damage fire or electric shock.
- Clean the plug if it is dirty, a dirty plug may result in a fire.
- Connect the plug so that the prongs are fully inserted into the receptacle.
- Noncompliance with these instructions may result in electric shock, short-circuiting, smoke or fire.
- Do not connect or disconnect the plug with wet hands. Handle the AC power cord with wet hands may result in electric shock or injury.

Warning

- Never open the lid while cooking rice. Opening the lid may result in burns.
- Do not allow children alone to use the rice cooker. Keep it out of reach of infants. Noncompliance to this instruction may result in burns, electric shock or injury.
- Do not immerse the rice cooker in water or splash it with water. Immersing or splashing may result in short-circuiting or electric shock.
- Do not modify the rice cooker. Disassembly or repairs should only be performed by qualified service representatives. Noncompliance to this instruction may result in fire, electric shock or injury.
- Do not put pins, wire, metallic objects or foreign matter into any gaps. Inserting such objects may result electric shock or injury due to malfunctioning.


Caution

- Do not use the rice cooker in an unstable place or on a carpet easily affected by heat. Doing so may result in a fire.
- Do not use the rice cooker near walls or furniture. Steam or heat will cause damage, discoloration and/or deformation. Use the rice cooker 30cm or more from wall or furniture. Be careful not to allow the shelf to become steamy when you use the rice cooker on a kitchen shelf.
- Do not use the rice cooker near a heat source or where it may be splashed with water. Heat or water may cause short-circuiting, leakage, deformation of the rice cooker, fire, or malfunction.
- Use the inner pan exclusively made for this rice cooker. Using any other inner pans may result in overheating or malfunctioning. Using any other inner pans may result in overheating or malfunctioning.
- Never touch the steam vent. Touching the steam vent may result in burns.
- Keep out of reach of children and infants.
- Do not touch hot parts while or immediately after cooking rice. Touching hot parts may result in burns.
- Unplug the AC cord when the rice cooker is not in use. Leaving the AC cord plugged may degrade insulation, resulting in injury, burns, electric shock, leakage, or fire.
- Be sure to hold the plug when disconnecting the AC cable from the AC outlet. Noncompliance to this instruction may result in electric shock or short-circuiting, resulting


in a fire.

- Take care of the rice cooker after it has cooled down. Touching a hot may result in burns.
- Do not touch the hook button when carrying the rice cooker. Otherwise, the lid may open resulting in injury or burns.

Structure

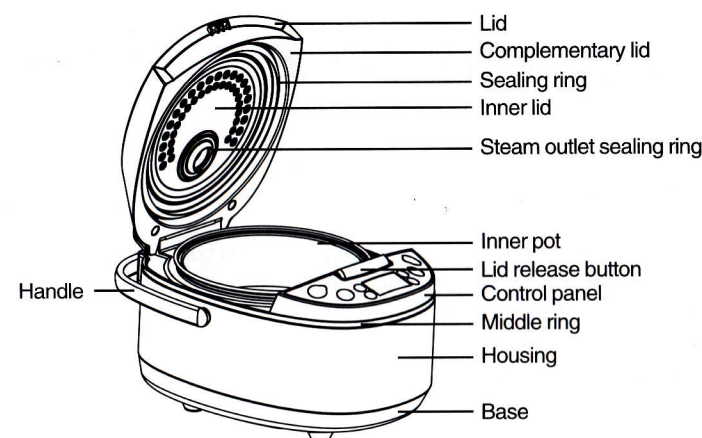

Electric Schematic Diagram

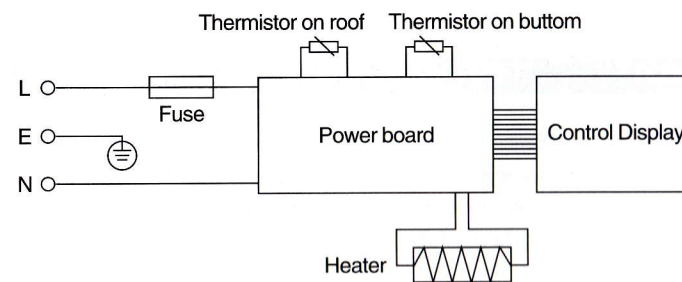

Specifications

Item No	Rated Voltage	Rated Power	Rated Capacity
EB-FC38-22	220-240V~ 50/60Hz	600-700W	3.0L
EB-FC58-22	220-240V~ 50/60Hz	860-1000W	5.0L

How To Use

Read before using the rice cooker for the first time.

- Wash inner pot, cover, measuring cup, rice spatula and steam rack in warm, soapy water. Rinse and dry thoroughly.
- Never immerse outer pot in water.
- Never place liquid in the outer pot; place it only in the inner pot.
- Never try to force cook lever to stay in the "Cook" position after it has shifted automatically to the "Warm" position.
- Always place inner pot inside outer pot before plugging in the rice cooker.
- When plugging in the cooker, always be sure inner pot contains liquid, or be ready to add oil, butter or margarine immediately to the inner pot.
- Save these instructions and refer to them often.

NOTE: Always wipe down the outer surface of the inner pot before placing it inside the cooker. Any moisture remaining on inner pot surface may cause a crackling noise while the unit is heating up. Except for actual cooking area, keep all surfaces dry to prevent damage to the inner workings of the appliance while it is in operation.

Operation

Rice (Cook, Fast cook, Crust)

- The maximum capacity of rice is 6 cups, the proportion of rice and water is 1.1, do not over the maximum capacity (above proportion of rice and water is just for you reference, you can adjust it according to you hobby).

- Press "Function", and choose cook, fast cook, or crust.
- The default time of crust is 1:30, the range of adjustment is 1:00-2:00. Press adjustment of time, you can adjust the time, press "add" can add the time, press "reduce" you can reduce the time, press each time can add or reduce 0.1 hour (6 minutes).
- When finish all the setting, press "start", enter into corresponding function, "start" light will light.
- When finish setting, cooker will enter into keeping warm, the corresponding light will light.

The reference list of cooking time

Function	Fast cook	Cook	Crust
Time	About 40 minutes	About 55 minutes	1-2 Hours

Attention: above is just for you reference, the cooking time will change according to the difference of voltage, capacity of rice or water, material of rice.

Note:

1. If press "start" when the rice cooker is standby, will enter into cook directly.
2. In order to avoid the rice stick together, please turn over the rice after enter into keeping warm.

Stew:

- Press "function" and choose slow stew.
- The default time is 2 hour, the range of adjustment is 2-8 hours, press "adjustment of time", you can adjust the time, press "add" can add the time, press "reduce" can reduce the time, press each time can add or reduce 0.5 hour (30 minutes).
- When finish all the setting, press "start", will enter into corresponding function, start light will light.
- When finish the work, rice cooker will enter into keeping warm, the corresponding light will light.

Soup:

- Press "function" and choose "soup".
- The default time is 1 hour, the range time of adjustment is 1-4 hours, press "adjustment of time", you can adjust the time, press "add" can add the time, press "reduce" can reduce the time, press each time ,can add or reduce 0.1 hour (6 minutes).
- When finish all the setting, press "Start", enter into corresponding function, start light will light.

- When finish the work, cooker will enter into keeping warm, the corresponding light will light.

Preset:

- The preset time is mean the cooking time, ex: it's 13:00 now, if you want to eat at 18:00. you should preset time for 5 hour, and then you can enjoy you dinner at 18:00.
- The preset time should not be long, in order to avoid the food untested, suggesting preset no longer than 12 hours.
- Below preset time is for you reference.

For example:

- Press "function" and choose "Soup", the default time is 1 hour, if you want to adjust the cooking time, (refer to the method of time set for soup to adjust the cooking time), when finish the setting ,and press the "Preset", enter into the model of adjustment, press "add", the add the time, press "reduce" to reduce the time, press each time, less than 10 hours will add (reduce) 0.5 hour (30 minutes), more than 10 hours will add (reduce) 1 hour.
- After finish the setting and press "start", the corresponding light will light, rice cooker start to work.

The reference list for preset time

Function	Cook	Crust	Stew	Soup
The range of preset time	1 hour-24 hour	66 minutes-24 hours	126 minutes 24 hours	66 minutes-24 hours

Note:

1. You can't preset when the cooker is under the function of fast cook.
2. When the preset time is less than cooking time, rice cooker will not enter into preset mode, but will enter into the function which you set immediately.

Problem And Method Of Solving

Stoppage	Reason	Methods of Solving
Indictor unlighted	1. "Power control plate" power doesn't switch on. 2. Power cut.	1. Check rice cooker if unplug. 2. Waiting.

Stoppage	Reason	Methods of Solving
Heating plate unheated	1. Power control plate damaged. 2. Fuse damaged. 3. Heating plate damaged.	Contact service center
Indicator lights, heating plate unheated	1. Heating plate damaged. 2. Power control plate damaged.	Contact service center
Porridge Over Flow	1. Capacity of porridge is excessive. 2. Haven't install the overflow-proof lid.	1. Adjusted the Capacity. 2. Installing the overflow proof lid.
LCD show : E1, E2, E3, E4	Power Control plate had trouble.	Send to "Repair Service Centre".
Rice under cooker	1. Capacity of rice is much or less. 2. The proportion of water and rice is not suitable. 3. Inner pot oblique. 4. Something between inner pot and heating plate. 5. Inner pot unshaped. 6. Main Power control plate damaged. 7. Main temperature. control machine unusual.	1. Capacity of rice and water should be adjusted, should be limited between highest and lowest. 2. Adjust the proportion of water and rice. 3. Turn round inner pot, check sensor of "heating plate". 4. Cleanup the sundries. 5. Send to "Repair Centre" or buy a new one. 6. Send to "Repair Centre". 7. Send to Repair Service Centre.
Rice over	1. Inner pot unshaped 2. Main Power control plate damaged. 3. Main temperature control machine unusual. 4. Inner pot oblique.	1. Send to "Repair Centre" 2. Send to Repair Centre. 3. Send to "Repair Centre". 4. Turn round inner pot, check sensor of "heating plate".

NOTICE

- Handle with care. Dropping the rice cooker or applying strong shock, it may cause damage or result in malfunctioning to the rice cooker.
- Be careful not to be exposed to steam when opening the lid. Expose to steam may result in burns.
- Do not connect several electrical appliances to a single AC outlet. Doing so may result in fire.
- Do not move the rice cooker while cooking rice. Otherwise, you may scald yourself or hot water may boil over.

• Do not wash the entire rice cooker. Do not wash the entire rice cooker or pour water in to the cooker or its bottom. Such handling may result in short-circuiting or electric shock.

Be sure to observe the following instructions to use the rice cooker.

- Remove scorched rice and grains of rice. If rice is scorched or grains of rice are left on the pan, steam may leak or hot water may boil over, resulting in malfunctioning or failure to cook rice properly.
- Do not cover the rice cooker with a towel while cooking rice. Otherwise, the rice cooker body or lid may be deformed or discolored.
- Do not heat the inner pan directly on a gas or electric range ovens. Doing so may result in damage to the pan.
- Use the supplied rice spatula with the product or a wooden spatula. Using a hard spatula may cause damage or separation of the coating of the inner pan.
- Do not wash tableware, etc. in the pan.
- Do not wash rice with an eggbeater, etc. and eggbeater may damage the inner pan and rice.

MAINTENANCE

CAUTION:

Always be sure that the appliance is switched OFF before cleaning or attempting to store the item. UNPLUG CORD FROM OUTLET. BEFORE WASHING, ALLOW RICE COOKER TO COOL.

CLEANING:

- Using damp dishcloth or sponge with soapy water to clean the outside of the appliance.
- Never immerse outer pot in water.
- Clean inner pot, cover, spatula and steam rack, in hot soapy water; rinse and dry all

parts. Using non-metal cleaning pad or sponge with hot soapy water to clean the non-stick interior surface of the appliance.

- Do not use abrasive powders, hard abrasive scourer or wire wool.
- Retighten loose screws. To reduce the risk of burn injury or property damage, check if handles, knobs or legs of the appliance are loose after every use. Retighten loose screws with appropriate tool, do not over tighten as which may result in cracking or stripping of handle, knob & leg.

Special cleaning note:

After consistent or long time use, the non-stick surface may slightly discolor. This is normal if tiny stains occur, which will not affect the performance of the rice cooker. Dark and widespread staining may also occur resulting from improper cleaning or overheating. Never use household bleach to clean the non-stick finish as it will permanently fade it.

HINTS FOR CARE AND USE OF NON-STICK SURFACE

1. Use only nylon plastic or wooden utensils with care to avoid scratching the non-stick surface. Never cut food on non-stick surface.
2. Remove stubborn stains with a plastic scouring pad and mild dish washing liquid.
3. Removing a mineral film. A spotted white film may form on the non-stick surface. This is a buildup of minerals from water and is not a defect in the finish. To remove, soak a soft cloth in lemon juice or vinegar and rub onto the finish. After cleaning wash, rinse and dry.

STORING

Allow the appliance to cool completely before storing. Store the appliance in a dry location. Do not place any heavy items on top of appliance during storage as this may result in possible damage of appliance. Store the cord in a clean, dry location away from metal objects. Always check the plug before use to assure metal items have not become attached. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

POINTS TO REMEMBER

- Do not turn on rice cooker when empty of water.
- Avoid placing unit under any wall cabinets when operating, as much steam is generated. Avoid reaching over the unit when it is operating.

- Use clean water to fill water reservoir before each use. Do not use wine, broth or other liquids. Do not add anything to the water.

- Cooking times are estimates and depend on the quantity, size, and desired degree of doneness and temperature of food.

- Cooking times may lengthen/shorten according to personal taste.

- Use hot pads or oven mitts when removing the lid from the rice cooker. Open the lid carefully to allow steam to escape safely.

- A bit of water may remain in water reservoir after the rice cooker is turned off. This is normal.

- Do not use any parts in microwave or on any cooking/heated surface.

- Unplug after cooking and allow the unit to cool before cleaning.

Gk
Ad
Me
Ad

Cu
For